

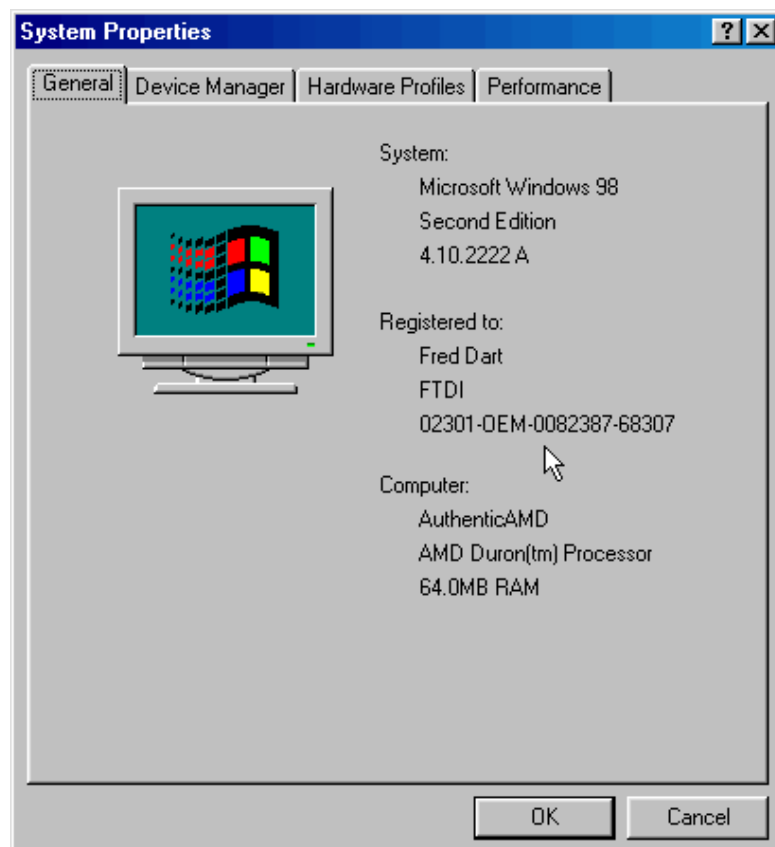
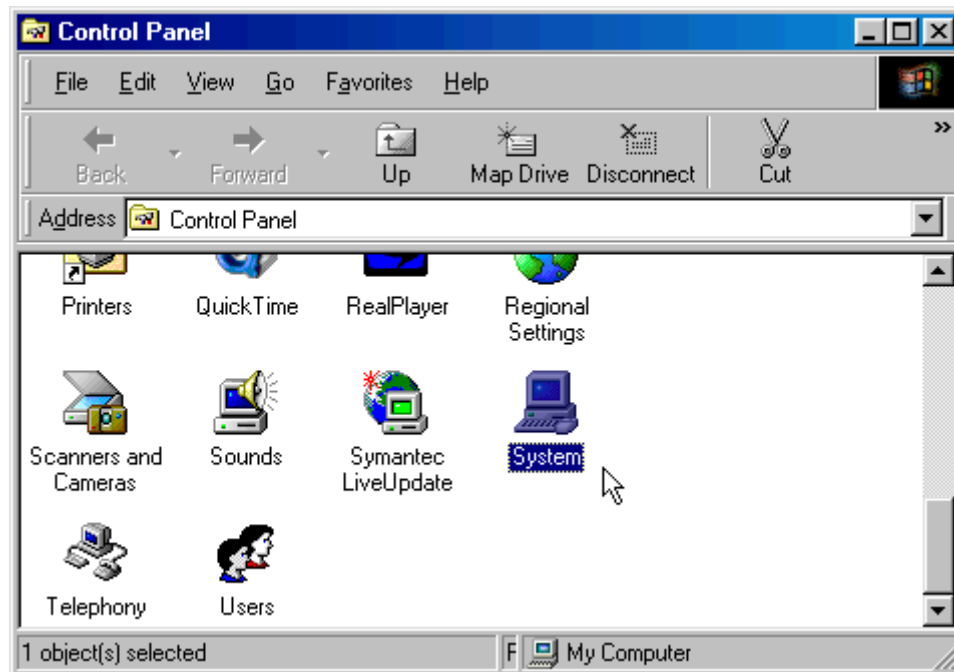




Instruction COM Port Setting V1.0

If you have problems to connect / read out the data logger - please read the following Short Instruction Manual for Setting Com Ports:

1. You can follow the displayed graph.

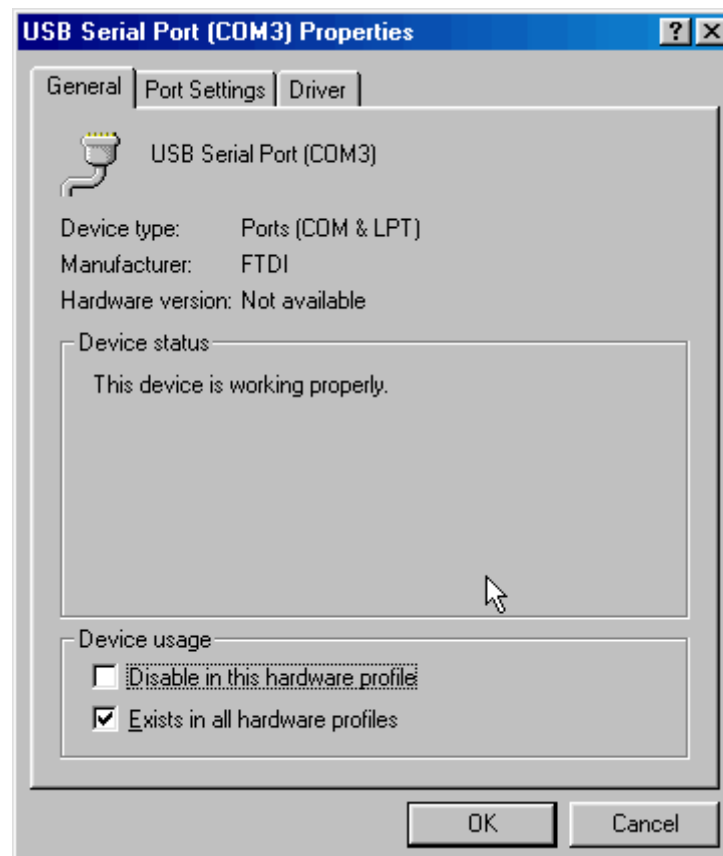

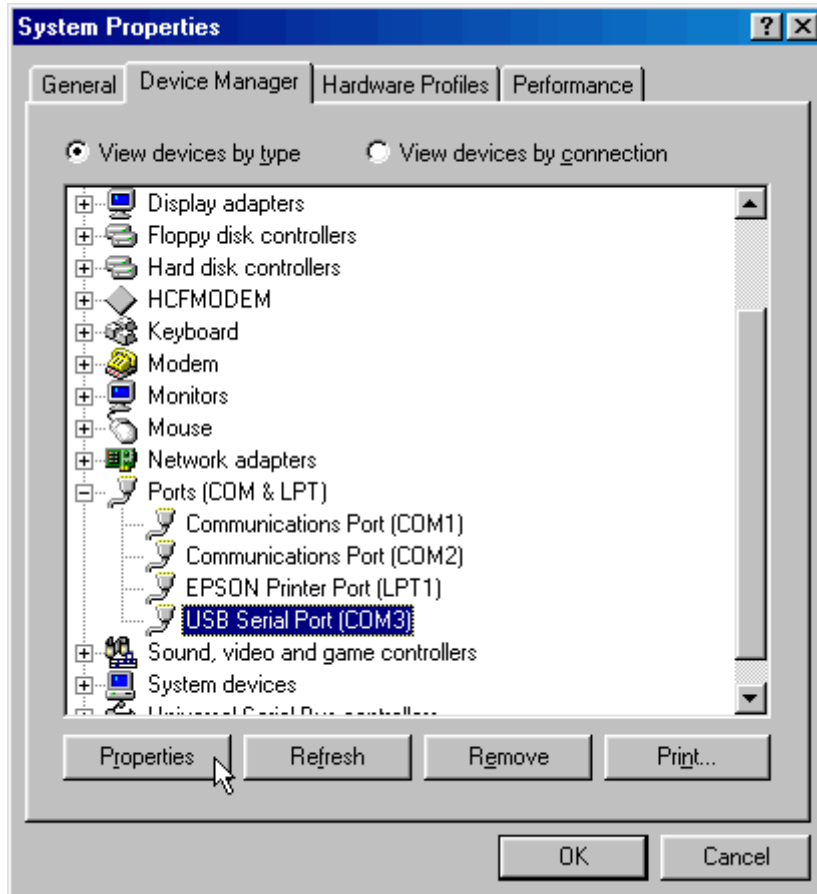

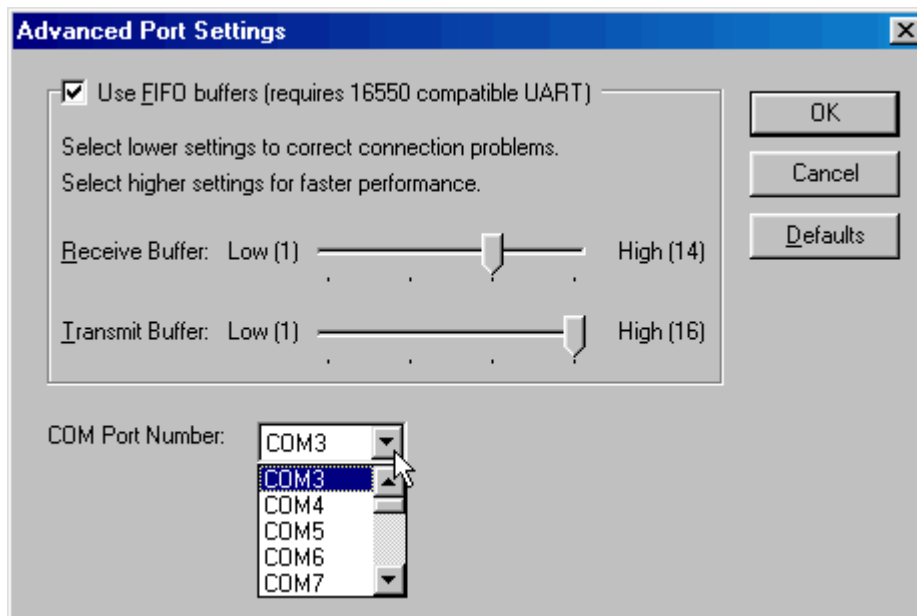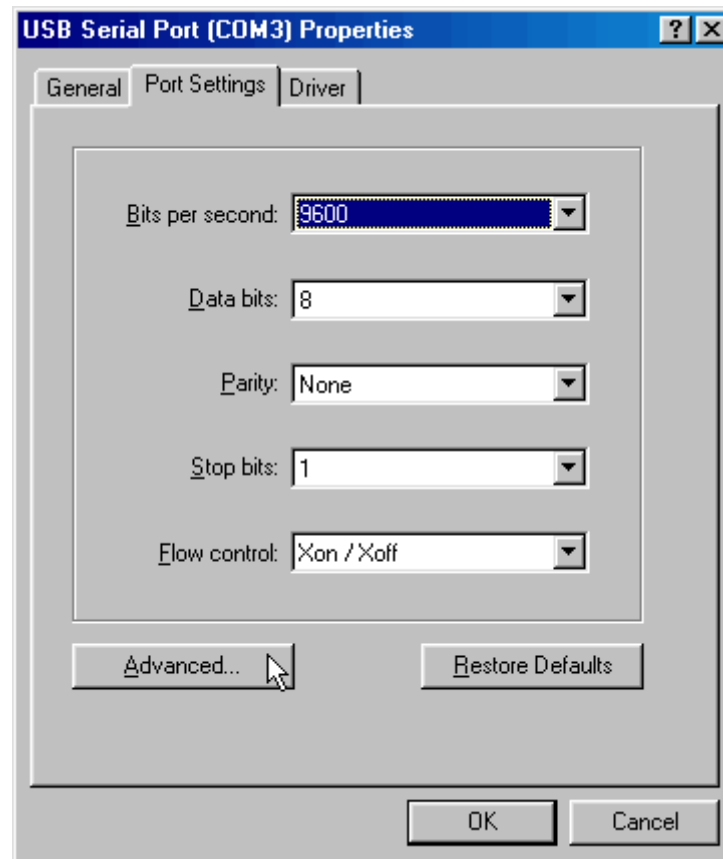

Set the COM Port to a lower number (3 or 4). Now you should be able to read out the data logger!