

973 Dew Point Mirror



Portable Industrial Chilled Mirror Hygrometer

- Fundamental drift free humidity measurement
- Integral frost/dew point measuring head
- Internal sample pump
- Optimal Response Injection System for fast measurement
- Pressures up to 20 bar
- Intuitive, easy to use LCD touch screen user interface

Typical applications:

- On-site calibration of dew point sensors
- Checking breathing gas quality
- Battery manufacturing
- Compressed air systems
- Standards laboratories
- Validation of production and storage conditions
- Dryer performance tests



ISO/IEC 17025
ACCREDITED
SCS 125

973 Dew Point Mirror

Fundamental Measuring Technique

The Model 973 Dew Point Mirror is a portable instrument equipped with an integral measuring head for both spot and continuous measurement of frost/dew point and temperature in air and gas. Based on the chilled mirror principle, the 973 provides fundamental, drift free and precise humidity measurement.

Simple to Use and Minimal Maintenance

The 973 has no need for either humidity sensor replacement or calibration adjustment. Unlike sensor-based systems, routine maintenance is conveniently limited to occasional mirror cleaning. Users can self-check instrument calibration stability using the integrated Ice-Test function.





Dew or Frost?

Below 0 °C, water can condense in either the liquid or solid phase (dew or frost). The difference in the temperature at which the condensate layer stabilizes can be up to 3 °C, therefore the condensate phase must be known for correct calculation or validation of parameters such as relative humidity. As shown on the picture to the right, it is also possible that dew and frost can exist concurrently on the mirror; this results in a non-stable value somewhere between the dew and frost point.

ForceFrost™ Function

Below a user defined temperature, the 973's ForceFrost function over cools the mirror to force the condensed layer to the solid phase. This eliminates the uncertainty of whether dew or frost point is measured.

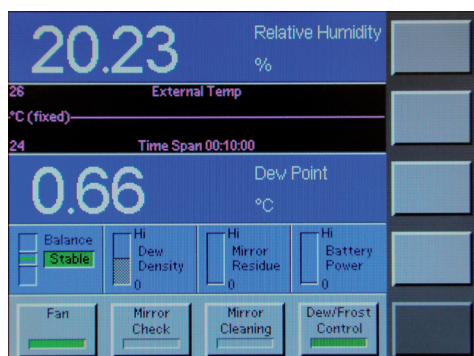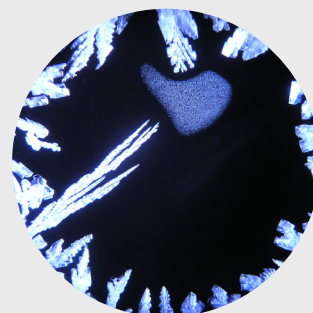

Intuitive User Interface

The 973 features a 5.7" LCD touch screen with a high contrast ratio and wide viewing angle for clear and easy readability. Using the on screen buttons and menus, you can easily configure each line of the instrument display for a variety of humidity, temperature and pressure parameters that may be viewed in units of your choice. A touch of a button changes any parameter between large font numeric and graph format with configurable axes so that the user can easily view measurement trends and stability without the need for external data acquisition.

Convenient Calibration Check

Users can easily check the 973 system's stability at any time using the built-in Ice-Test function. This is an automated test procedure that allows the user to check that ice on the mirror


melts at 0 °C and therefore verify the stability of the mirror temperature measurement.

973 Dew Point Mirror

Optimum Response Injection System: Accelerated Results

The Optimum Response Injection System (ORIS) is unique to MBW dew point instruments. At low frost/dew point conditions, the time to stabilize a condensate layer can be significant, sometimes as long as two hours for correct equilibrium.

ORIS reduces the stabilization time using a carefully programmed vapor injection procedure that accelerates the formation of a frost layer and then interfaces with the mirror control system to maintain stability. When the rate of sublimation and condensation is equal, the measurement system is truly in equilibrium, and the result precise.

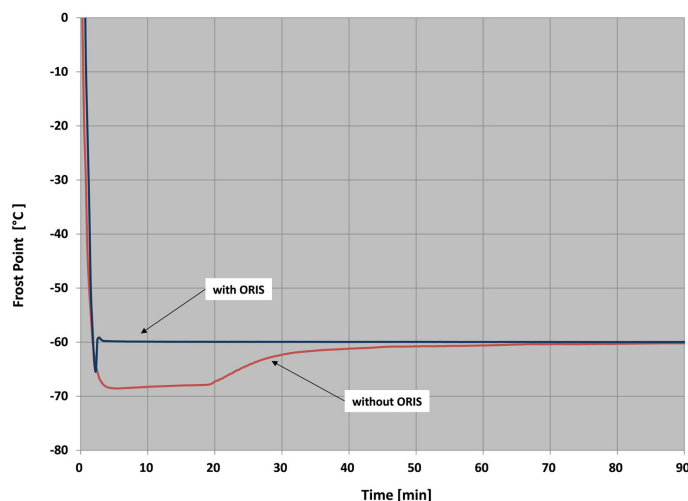

Precise Temperature Measurement

The 973 includes a 4-wire platinum resistance thermometer (PRT) for temperature measurement and to enable precise calculation of relative humidity. The temperature probe supplied is connected by cable to the 973 back panel and can be positioned by the user at the optimum measurement point within the application. In the event that direct measurement of the application temperature is not available, values can be manually input via a touch screen to allow the calculation of relative humidity at the process or application temperature.



Integrated Pressure Measurement

Integrated pressure measurement means that the 973 is able to compensate for pressure variations at the point of measurement resulting in the lowest possible uncertainties. The 10 and 20 bar pressure options are especially useful for compressed air systems, in-situ dew point sensor calibration checks, gas dryers and breathing gas applications.



Integrated Sampling System

An internal sample pump and flow meter is standard on the 973. This allows the user to connect the 973 to any application using sample tubes and pump a controlled flow of gas through the 973 measuring head, and if required, back to the application. This is especially useful for applications at atmospheric pressure where a reference instrument is used to validate conditions or calibrate fixed measurement sensors without the need for their removal from processes.

Extended Operating Range

At an ambient temperature of 20 °C, the 973 three-stage Peltier thermoelectric mirror cooling is capable of reaching -60 °C frost point. For optimum performance and to extend the working range to lower frost point values, the option of including auxiliary water cooling is available.

Transportable

The 973 is self-contained and easy to transport around site or to different measurement locations.

A robust IP65 case is also available to protect the instrument during shipping for calibration.



973 Dew Point Mirror

Specifications:	973	
Measuring Range Frost/Dew Point Temperature Relative humidity Humidity content by volume Humidity content by weight Inlet pressure	-60...+20 °C -50...+100 °C 0.1...100 %rh 100...20'000 ppm _v 5...2'500 ppm _w 0...2.5bar, 10 and 20 bar options	
Accuracy Frost/Dew Point Temperature %rh Pressure	≤ ± 0.1 °C (-60...20 °C), ± 0.3 °C ≤ ± 0.1 °C ≤ ± 0.5 %rh ≤ ± 0.1% range	
Reproducibility Frost/Dew Point Temperature	≤ ± 0.05 °C ≤ ± 0.05 °C	
Standard Features Mirror Temperature sensor Digital I/O Thermoelectric mirror cooling Mirror temperature sensor Display Internal gas tubes Gas connections ORIS Power cable Operating instructions Calibration certificate	Rhodium plated gold Ø2 x 100 mm PRT on 3 m cable RS-232 3-stage, 80 °C depression at 20 °C RTD (Pt100) 5.7" LCD with touch screen Stainless Steel 316L (inlet and outlet) FEP outlet with sample pump 6 mm or ¼" Swagelok fittings Optimum Response Injection System 2.5 m English and German Factory calibration: 5 points FP/DP, 3 points temperature Upgrade to SCS accredited ISO17025 calibration available	
Optional High pressure Analog outputs Additional water cooling Transport case	10 or 20 bar internal pressure sensor (no sample pump fitted) User programmable, 2 x 4...20 mA or 0...10 V Extends frost/dew point range to -70 °C (water temp. 5 °C, ambient 20 °C) Custom fit foam lined Pelicase	
Additional Information Supply voltage Power consumption Cooling Operational conditions Storage temperature	100-120 VAC / 200-240 VAC, 50/60 Hz (auto switching) 200 Watt Air, additional water cooling optional -10 °C...+40 °C, Maximum 98 %rh, non-condensing -20 °C...+50 °C	
Weights & Dimensions Width Height Depth Weight	Instrument 420 mm 155 mm 390 mm 12 kg	In Transport Case 650 mm 370 mm 510 mm 26 kg

973 V2.0 6.2012 We reserve the right to change design or technical data without notice.

MBW Calibration Ltd.
Seminarstrasse 57
CH-5430 Wettingen
Switzerland

Phone +41 56 437 28 30
Fax +41 56 437 28 40

www.mbw.ch
sales@mbw.ch



ISO/IEC 17025
ACCREDITED
SCS 125

973 Dew Point Mirror

Ordering Information

973, -60...20 °C FP/DP, Ø2 x 100 mm PRT with 3 m cable, integrated sample pump	Order Code 100055
Options:	
973 upgrade factory calibration to ISO17025	103847
10 bar pressure upgrade, no sample pump	103635
20 bar pressure upgrade, no sample pump	104021
Analog outputs, user programmable, 2x 4...20 mA or 0...10 V	102662
Additional water cooling	103362
Additional 1 year warranty upgrade (max. 3 years)	103632
Transport case	100904
For the complete range of options and accessories, please contact us and request a pricelist.	

MBW Calibration Ltd.
Seminarstrasse 57
CH-5430 Wettingen
Switzerland

Phone +41 56 437 28 30
Fax +41 56 437 28 40

www.mbw.ch
sales@mbw.ch



ISO/IEC 17025
ACCREDITED
SCS 125